User Manual

❋ Thank you for your purchase !

1. Attention

◆Please take out the battery if you don't use the MP3 player for long time.

◆Please insert the battery in the right direction.

◆Please don't take out the battery when the player still on working.

◆Please switch off the player before you change the memory card.

2. Accessories

- ◆ Main Body
- ◆ User Manual
- ◆ Stereo Earphone
- ◆ Mini 5Pin USB Cable

3. Key definition

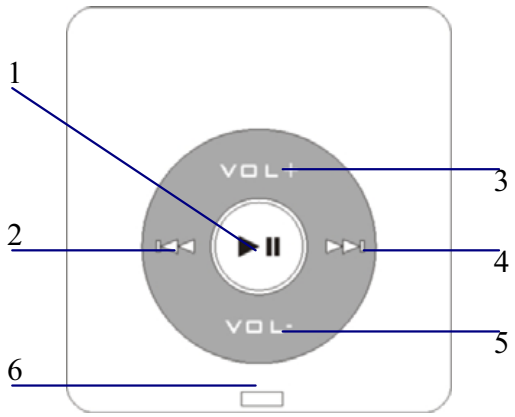

1. Power/Play/Pause/Stop ***(PLAY)***
2. Reward ***(REW)***
3. Volume increasing ***(VOL+)***
4. Fast Forward ***(FF)***
5. Volume decreasing ***(VOL-)***
6. Indicator ***(R_LED)***

4. How to use Memory-card

◆Please switch off the player before insert SD or MMC card.

◆Please follow the direction when insert the card.

◆If the card is in LOCK STATUS, the player only can read the data of the card without any change, but all the buttons are effective.

◆The player use USB cable to connect with the computer to download/upload programs, songs and documents.

5. Operations

◆Power ON/OFF: Plug in earphone, press ***PLAY*** for two second then the player will power on. When PLAYING MUSIC, long press ***PLAY*** for four second to power off the player. When in the STOP mode, long press ***PLAY*** for two second to power off the player.

When you try to power on the player without a SD/MMC card or with an empty card, the player will automatically shut down within 3-4 seconds.

◆Play: Press ***PLAY*** to play music, the player will go from first song to last one, and then the player will stop playing.

◆Pause & Stop: When playing music, press ***PLAY*** to pause, or press ***PLAY*** for two second to stop, then press ***PLAY*** to replay again. When PAUSE is over than thirty-five second, the player will be off.

◆Change song: When playing music, press ***FF*** key for next song, press ***REW*** for last one.

◆Fast forward/backward: By long press ***FF/REW*** you get the fast forward or backward within a music title.

◆Adjust volume: Press ***VOL+*** key to increasing volume, ***VOL-*** for decreasing.

6. LED Indicator:

◆LED lights under three conditions

- Power on the player within SD/MMC card;
- In music pause or idle mode;
- When connecting the player to the computer via the USB cable;

◆LED flash under three conditions

- Power on the player without SD/MMC card or with an empty card;
- Power off the player by long press ***PLAY*** button;
- In music play mode.

.7. Trouble Shooting

◆Player without function

✓ Check battery, maybe battery empty or battery on wrong position. Please switch on the player after five second again.

◆Playing music but sound function missing

✓ MP3 sound volume may too small, please adjust sound volume.

✓ Earphone connection is interrupted, please check earphone again.

✓ Music file on memory card is not fully installed or data not correct, please download from computer again.

Please read the User Manual carefully before using the player. If button invalidation, electric current noise, or others problems occur, please try to take off the battery and reload it, or format the SD/MMC card before trying to power on your player again. Contact your dealer if problem persists.

When the battery is running low, the player may shut itself down automatically. Please put in a new

battery and try again.

Please use good quality SD/MMC card, as improper use of low quality cards might result in high consumption of your battery or machine malfunction.

8. Specification

Dimension	59x56x13 mm
Memory Type	SD/MMC card(32MB-1GB)
Power Supply	1 AAA 1.5V Alkaline Battery
Playing Time	1-5 hours (According to different card and battery.)
USB Speed	USB2.0 High Speed
MP3 Bit Rate	32Kbps—320Kbps
WMA Bit Rate	96Kbps—192Kbps
Frequency Range	20Hz—20KHz
Output	5Mw(L)+5mW(R)

SNR	>85 dB
Operation System	Windows Me/2000/XP/NT/Mac OS 8.6 or higher

Specification may be changed without prior notice.